### Instructions for raising the mast and fitting the forestay/furler

#### Preparing the mast

#### Action

Shift the mast aft from its transporting position and install the pivot pin on the mast step.


Check that the shrouds are free.

Don't forget to install the tell-tales

## Prepare the frame and lifting tackle


#### Action

The wishbone frame will usually be on the foredeck. An aluminium link supports it at the bow, secured by a springloaded pin in the aft-most hole in the bow fitting.

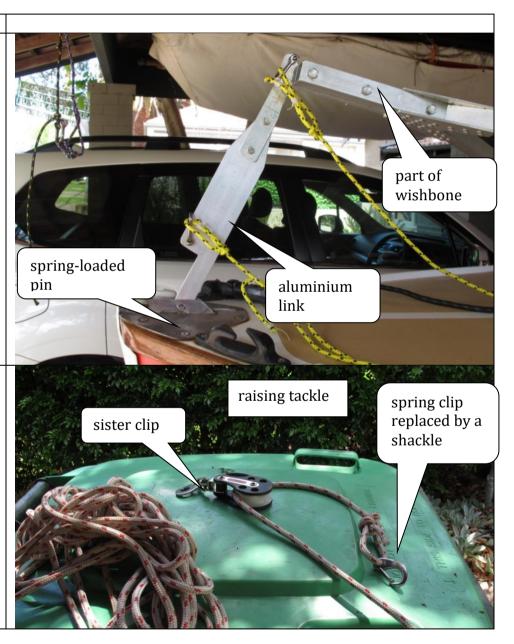

Identify the raising tackle (pulley with red/white rope, sister clip, and shackle).

Attach the shackle on the end of the red/white rope) to the bow ring.

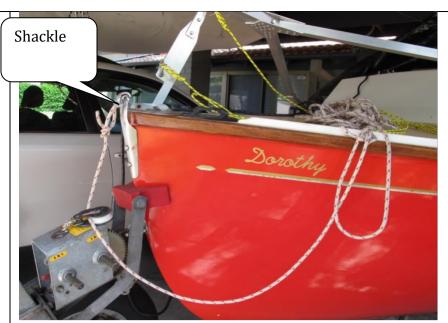

Identify the yellow cord that has two loops at the free end, one of these loops has a sister clip on it.



Connect this sister clip to the one on the pulley.



Identify the yellow cord that is attached to the wishbone frame. The other end of this cord will be shackled onto the mast



The mast will be supported at the bow by an aluminium link. Disconnect this link from the bow fitting (store the spring pin in the other hole in the bow fitting). Swing the frame up and over the cabin, paying out the yellow cord that connects the link to the pulley, then pay out the red/white line from the pulley, until it comes up against the stop knot. Shackle the other yellow cord to the (lower) saddle on the

mast.

You are now ready to raise the mast.



## Raising the mast

Action Check that the shrouds are free	
and bring the forestay with the tensioning mechanism on it as	
far forward as is convenient.	
The person in the boat lifts and steadies the mast, while the person standing on the ground pulls on the red/whiterope from the pulley (to get the proper purchase, stand near the bow).	

When the mast is upright, there will be a small aluminium link dangling from the yellow cord near the pulley.



Attach this link to the aft-most hole in the stem fitting and retain it with the spring pin. The mast is now secure.



Disconnect the pulley tackle and put it in the cardboard box.


## Preparing the furler

#### Action

Attach the furler to the bow fitting, with the black-and-yellow painted edge pointing forward. Secure it with the spring pin stored on the furler.



#### Fitting and tensioning the forestay

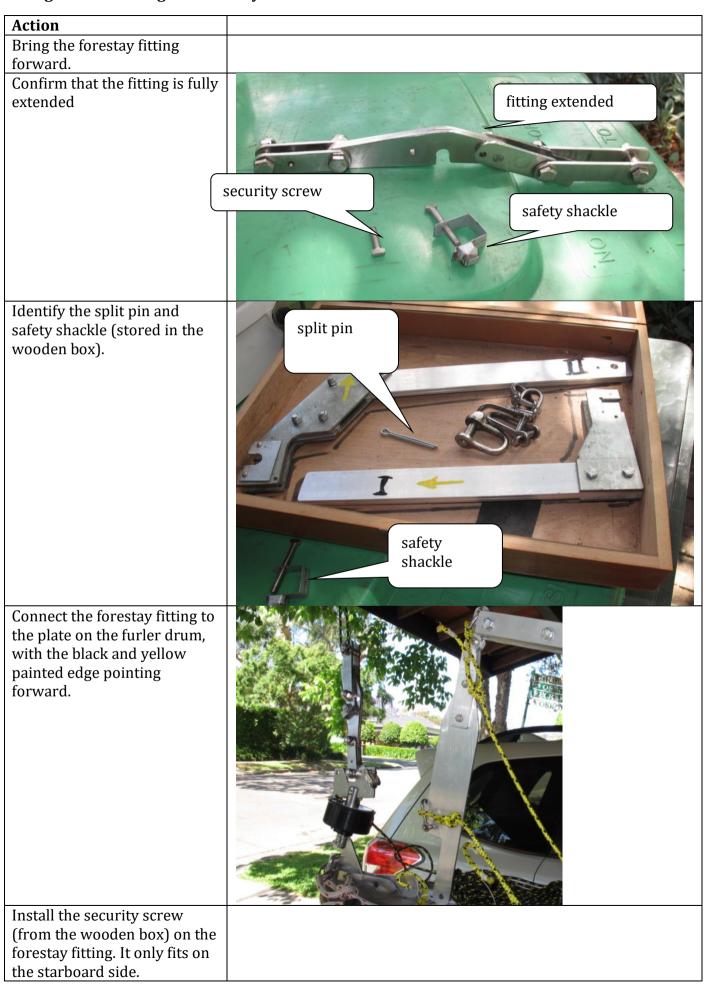

The forestay is tensioned in two stages.


Stage 1:

Take key I.

With the yellow arrow pointing upwards, slide the key in between the top links and onto the movable link in the fitting.

Rotate the key until the handle is roughly horizontal, and insert the split pin (from the wooden box) into the holes in the body of the rotating link.

This is the end of stage 1.

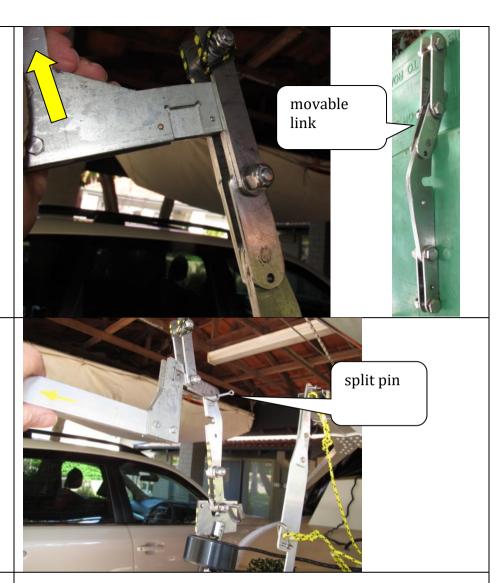

# Stage 2

Remove key I

Take key II. With the yellow arrow pointing upwards, slide the key over the end of the movable link.



Take the strain, and remove the split pin.

Rotate the key as far as it will go. You should feel it go "over centre".



When the linkage has gone over centre the linkage will be secure for the moment.


To ensure security when sailing, install the safety shackle. It fits either way.



Remove key II

## Clearing up

Action	
Disconnect the line from the	
wishbone at the bow	
Disconnect the line from the	
mast	
Bring the wishbone down toward	
the bow.	

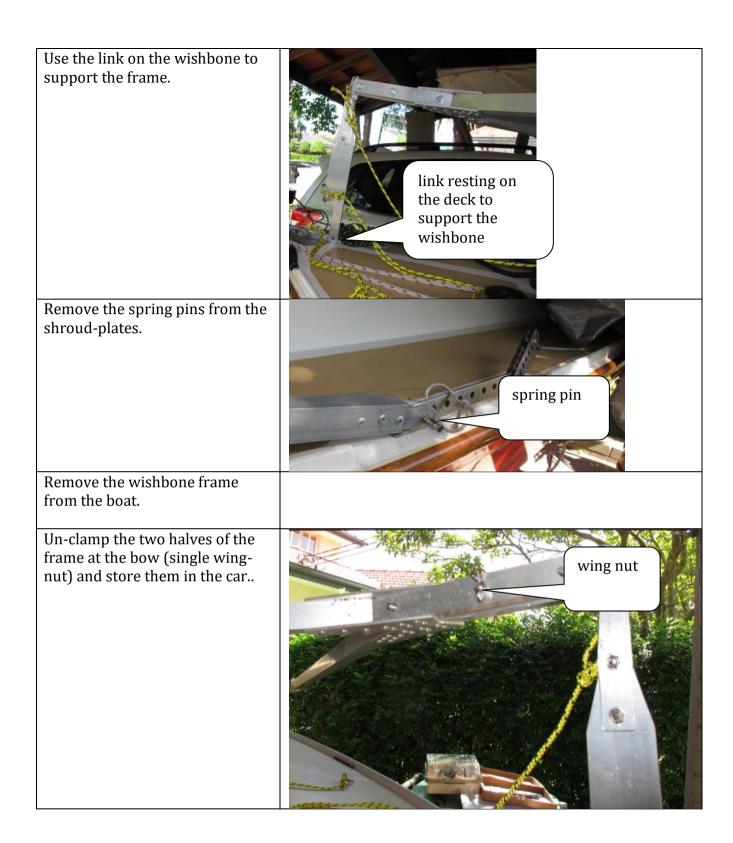

# Finish rigging the furler

Action	
Turn the tensioner assembly so	
that the black/yellow edge points	
aft.	
Shackle the jib (tack) onto the aft	
shackle on the connecter plate	
Hank the jib onto the forestay.	
Check that the jib halyard is	
correctly reeved, with the multi-	
coloured line aft and the	
yellow/black line forward.	
Shackle the multicoloured line	
onto the top (peak) of the jib.	
Raise the jib by pulling on the	
yellow/black line.	
Hold onto the multi-coloured	
line, disconnect the yellow/black	
line and put it somewhere safe	
(eg in the cardboard box).	
Thread the multi-coloured line	
through the shackle on the front	
of the connecter plate, then up	
and through the loop on the	
multicoloured line. Tension it by	
pulling down on the line and	
secure it to itself with half	
hitches.	
If the jib sheets are not already	
attached to the jib, attach them	
now.	
Run the jib sheets through their	
blocks.	
Run the control line aft.	
Furl the jib by pulling on the	
control line	

# Lowering the mast

This is essentially the reverse of raising the mast.

Action	
Action	
Free the jib sheets from their	
blocks.	
Un-furle the jib.	
Untie the multi-coloured line,	
and disconnect it from the	
shackle on the connecter plate.	
Shackle the yellow/black line to	
the loop of the multi-coloured	
line.	
Lower the jib (yellow/black line).	
Un-hank the jib and un-shackle it	
from the connecter plate.	
At some stage, roll the jib and put	
it in its bag.	
Tie the end of the yellow/black	
line to the shackle on the multi-	
coloured line and tie it to the eye	
on the end of the wire forestay.	
Re-assemble the wishbone.	
Re-install the wishbone (with the	
aluminium plate facing the deck).	
Re-attach the line to the mast.	
Re-attach the small aluminium	
plate to the aft hole in the bow	
fitting.	
The mast will now be secure	
when the forestay is	
disconnected.	
Rotate the furler until the	
yellow/black edge is pointing	
forward.	
Remove the safety shackle from the tensioner.	
	safety shackle

Take key II, and slide it over the movable link in the tensioner (the yellow arrow will be roughly horizontal). Note, figure shows key in final position.	
Rotate the key until you can put the split pin in the holes in the movable link. You will be pulling it over centre, so be prepared.	
Remove key II.	
You can probably do the next bit by hand.	
Take the strain on the movable link, remove the split pin and allow the movable link to fully extend (if necessary you can use key I). Put the split pin in the box Note, figure shows key in final position.	
Remove the safety screw from the tensioner and put it in the	
wooden box.	
Unhook the tensioner from the	
furler, and put the tensioner on	
the cabin top	
Shackle the red/white rope onto	
the bow ring. Connect the pulley to the yellow	
rope using the sister clips.	
Install the mast-rest at the stern	
of the boat.	

V.V. 1	
With someone in the boat	
guiding the mast, lower it into	
the mast support, taking the	
strain with the red/white rope	
(note, to get the best purchase	
with the pulley, stand near the	
bow)	
Remove the pin on the mast foot,	
then replace it in the bracket.	
Slide the mast forward to the	
marked position and secure.	
Don't forget to remove the tell	
tale!	